





### **INFRARED CAMERAS**

The most versatile infrared cameras in the world

when temperature matters

# The Compact- and the Precision Line offer imaging infrared temperature measuring devices for all applications

#### Advantages of the Xi Compact Line

- Motor focus
- Compact industrial imager for temperature measurements from –20 to 900 °C
- Autonomous operation with automatic spot finder and direct analog output – ideal for OEM use (Xi 80)
- Direct Ethernet interface (Xi 80)

#### **Advantages of the PI Precision Line**

- Interchangeable lenses
- Suited for fast processes (up to 1 kHz)
- High thermal sensitivity (up to 40 mK NETD)
- High optical resolution (up to 764 x 480 Pixel)
- · Laser blocking filters
- Temperature measuring ranges from –20 to 2450 °C
- Different spectral ranges
   (500 nm 800 nm / 1 μm / 7.9 μm / 8 14 μm)
- · Delivered with test certificate



#### **Automatic hotspot search**

Objects can be thermally analyzed and hot or cold spots can be found automatically.

# Ø 56,9°C 75.0

#### **Fast measurements**

Temperature distributions on a surface can be precisely recorded at millisecond intervalls.

### Autonomous operation with direct analog output

Up to 9 freely definable measuring areas may be used as analog outputs when using an external process interface.



#### Simple process integration

Software Development Kit (SDK) for integration of the camera into customer-specific software via Dynamic Link Library (DLL) or COM-Port.

Interfaces to LabView and MATLAB are included as well.

#### optris Microscope optics

The interchangeable and focusable microscope optics enable electrical testing and thermal analysis of smallest components at the same time - with an optical resolution of



up to 28 µm. Fast processes can easily be monitored with a frame rate of up to 125 Hz and, with the recording of radiometric video sequences and images, be saved for later analysis.


All optris infrared cameras are compatible with the Data Acquisition (DAQ) Software Dewesoft X by



#### INFRARED CAMERAS FOR OEM USE

# Compact spot finder IR camera




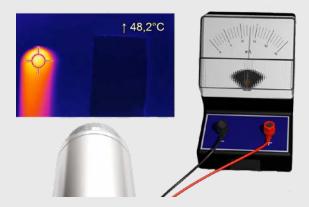

#### Integrated spot finder function

The integrated spot finder function allows for precise temperature measurements of moving objects - without having to readjust the sensor.

The camera figures it out on its own, without being connected to a PC.

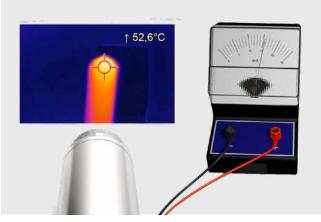


- Industrial imager for precise temperature measurements from –20 to 900 °C
- · Rugged, compact imager with motor focus
- Autonomous operation with automatic spot search and direct analog output
- 80 Hz frame rate for the monitoring of fast thermal processes
- Extensive ready-to-use package for an attractive price – incl. versatile image processing software and connection cables

#### Pyrometer or camera?

The Xi series is a fusion of a rugged, compact pyrometer and a modern IR camera.

Thanks to analog and digital outputs as well as the option to process up to nine freely definable measuring areas using an external process interface, the Xi camera is perfectly suited for OEM applications.

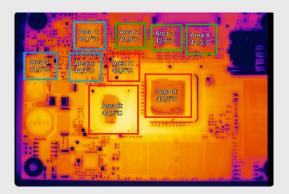



#### Motor focus simplifies handling

Both Xi models are equipped with a motorized foucus.

The free PIX Connect software enables a remote focusing from the distance.

#### optris PI 400i

#### INFRARED CAMERA WITH HIGH OPTICAL RESOLUTION

# One of the smallest camera in its class


- One of the smallest camera in its class (46 x 56 x 68 77 mm)
- Very good thermal sensitivity at 75 mK
- Thermal image recording up to 80 Hz
- Interchangeable lenses & industrial accessories
- Detector with 382 x 288 pixels
- Lightweight (237 251 g, depending on lens)
- Includes license-free analysis software and full SDK




### High performance for a wide range of applications

The high-performance optris PI 400i infrared camera has a wide range of uses in industry.

For example, thermal image shots help to monitor processes and ensure the quality of manufactured products in the automotive field in particular, in the manufacturing of plastics as well as in the semiconductor and photovoltaic industry.

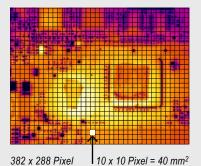

SMD chip as measurement object: measurement field size: 240 mm x 180 mm, pixel size: 0.63 mm

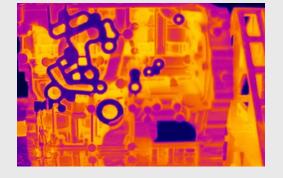

# Probe 2 Probe 1 Probe 1 Probe 1 Probe 1 Probe 2 73.9

Thermal image shots of preforms in PET bottle production

### 80 Hz recordings with full pixel resolution

The display and recording of thermal images at full optical resolution can be done at high measurement speeds of 80 frames per second.



Application examples, e.g. in the plastics industry: www.optris.global/plastics

#### optris PI 450i


# INFRARED CAMERA WITH VERY HIGH THERMAL SENSITIVITY

# Detection of minimal temperature differences



- One of the smallest camera in its class (46 x 56 x 68 77 mm)
- Exceptional thermal sensitivity at 40 mK
- Thermal image recording up to 80 Hz
- Interchangeable lenses & industrial accessories
- Detector with 382 x 288 pixels
- Lightweight (237 251 g, depending on lens)
- Usable at ambient temperatures of up to 70 °C without the need for additional cooling
- Includes license-free analysis software and full SDK


#### Highest temperature resolution of 40 mK

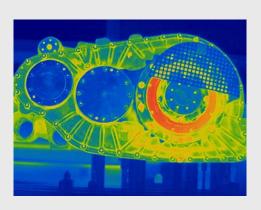


With an thermal resolution of 40 mK, the optris PI 450i is used for measuring the most subtle temperature differences, e.g. in the quality control of products or in preventive medicine.

#### Application example in the medical sector

Due to the very high resolution of the optris PI 450i, even veins can be made visible unter the skin.

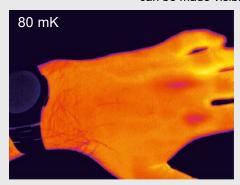

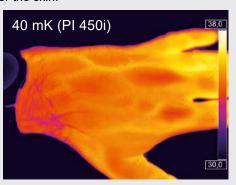


#### optris PI 640


#### THERMOGRAPHY IN VGA RESOLUTION

# One of the most compact infrared camera in the world

- 640 x 480 pixels
- Radiometric video recording at 32 Hz / 125 Hz in subframe-mode (640 x 120 pixels)
- Compact size of 46 x 56 x 76 100 mm (depending on lens)
- Lightweight (269 340 g, depending on lens)
- Includes license-free analysis software and full SDK



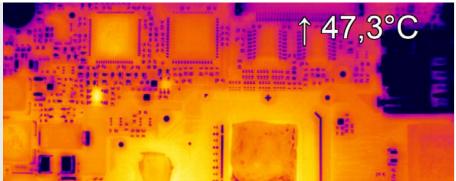

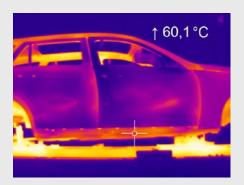



# Razor sharp infrared pictures and videos for process optimization

With a casing size of only 46 x 56 x 90 mm and a weight of 320 grams (depending on lens), the optris PI 640 is among the most compact infrared cameras on the market.

The high-definition optris PI 640 infrared camera is best used in applications where finest thermal details matter.

It significantly contributes to process optimization in both research and development and in industry.

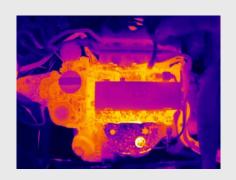

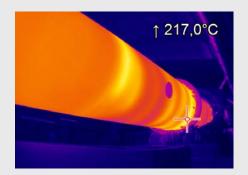



Application examples, e.g. the early detection of fires in garbage bunkers:

www.optris.global/fire-prevention


#### optris PI 640 Microscope optics

#### INTERCHANGEABLE LENSES FOR MACRO IMAGES

# Microscope optics for the inspection of electronic boards

- Exchangeable, focusable optics for most flexible use of the camera
- Analysis of small chip level components down to 28 μm
- Hands-free operation for simultaneous testing and IR imaging
- Frame rates up to 125 Hz allow inspection of fast processes (like pulsed laser diodes)
- Radiometric video or tiff recording with +/-2 °C measurement accuracy
- License-free analysis software and complete SDK included



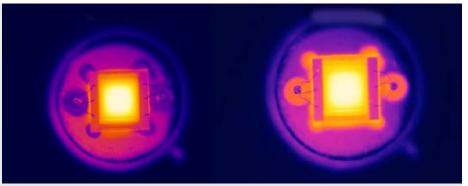


# High resolution microscope optics for test & measurement

Besides the regular lenses, the PI 640 features a special microscope optics. Apart from detailed macro recordings of individual components, these also allow recordings of the entire circuit board.

High resolution macro shots of individual components are possible with a spatial resolution of 28 µm, the distance between the measurement object and camera is variable and can be adjusted between 80 and 100 mm.

The high-quality thermal and geometric detail resolution of the infrared cameras ensures precise functional testing of electronic products, as even the smallest temperature differences to be accurately detected.

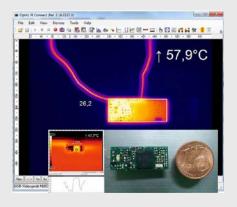



Application examples for the analysis of electronic boards:

www.optris.global/electronics-industry



Recording of a circuit board with the optris PI 640


#### optris PI 450i G7 / PI 640 G7

# INFRARED CAMERAS FOR SURFACE TEMPERATURE MEASUREMENTS ON GLASS WITH LOW REFLECTIONS


# High-resolution thermography for the glass industry

- Usable at ambient temperatures of up to 70 °C without the need for additional cooling
- With an integrated filter for the spectral range of 7.9 µm
- Compact size of 46 x 56 x 76 mm
- Frame rate up to 125 Hz
- Line scan function through license-free analysis software PIX Connect
- Max. scan angle of 111 °C with 800 pixels per line




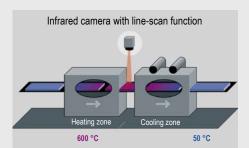

Construction of a glass tempering plant

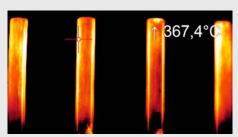

Glass tube manufacturing

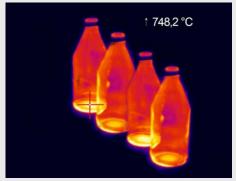

Hot-spot measurement in the production of glass bottles



Glass panes between heating and cooling zone

### **Exact temperature measurements on glass surfaces** via line-scan camera function

The temperature of glass is best measured in the range of spectral absorption bands.

For this purpose the optris PI 450i/ 640 G7 has an integrated 7.9 µm filter which enables an anechoic IR surface temperature measurement. Its compact size makes the optris PI 450i/ 640 G7 particularly suitable for use in confined spaces and for installation in industrial facilities. The infrared camera is fully operational at ambient temperatures of up to 70 °C without the need for cooling. With an imaging frequency of up to 125 Hz, glass products can be continuously tested, even in fast processing.

The line-scan camera function (line-scan mode) of the PIX Connect software enables the exact temperature measurement of panes of glass during transport on conveyor belts. This is a particularly important quality factor in tempering processes, e.g. in ESG and VSG.



Application examples for the glass industry:

www.optris.global/glass

#### optris PI 05M / PI 08M / PI 1M

#### INFRARED CAMERAS FOR THE SHORTWAVE DOMAIN

#### **Ultra** compact infrared cameras for the metal industry

- · Highly dynamic CMOS detector with an optical resolution of up to 764 x 480 pixels
- Very large temperature measurement ranges (without sub-ranges) of 450 °C to 1800 °C (PI 1M), 575 °C to 1900 °C (PI 08M) and of 900 °C to 2450 °C (PI 05M)
- Frame rates and linescanning function up to 1 kHz for fast processes
- Real-time output of 8x8 pixels with 1 ms response time
- Includes license-free analysis software and full SDK
- New: PI 08M Ideally suited for all laser processing applications with solid-state lasers in NIR through excellent blocking of radiation




#### Smart temperature measurement -Innovative and fast

The IR cameras optris PI 05M, PI 08M and PI 1M are specially suited for measuring the temperature of metals, as these exhibit a distinctly higher emissivity at the short measurement wavelength of 500 nm and 1 µm than at measurements in the previously conventional wavelength range of 8 – 14 µm.


Especially the spectral range of 500 nm enables for more precise measurements at changing emissivities and is less sensitive to atmospheric influences. Thus, the PI 05M is ideally suited for temperature measurements of molten metals.

A direct 1 ms analog output allows all camera models a readout of a freely selectable 8x8 pixel region in real-time. The use of these image sensors allows a large dynamic range for temperature measurement so that the previously necessary use of relatively many and narrowly defined sub-ranges is no longer required. The PI 1M, PI 08M and PI 05M's two-dimensional temperature measurement opens up new options compared to the


temperature range of 450 up to 2450 °C, the optris PI 05M, PI 08M and PI 1M IR camera satisfies practically all demands in the fields of metal production and processing.

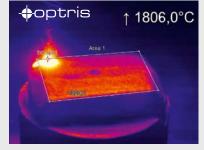

Measurement during laser welding process

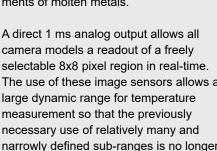

usual spot measurement of pyrometers. Thanks to the large measurement

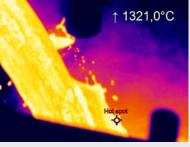

Measurement of a pouring stream




Induction heating

924,6°C

Application examples for the metal industry:

www.optris.global/metal

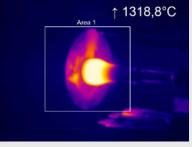

Electrical upsetting

#### optris Xi infrared cameras - Compact Line

#### Optics calculator: www.optris.global/optics-calculator

Compact spot finder IR camera for use in harsh industrial environments, autonomous operation possible.





Basic model	Xi 80	Xi 400
Туре	IR	IR
Detector	FPA, uncooled (34 µm pitch)	FPA, uncooled (17 µm pitch)
Optical resolution	80 x 80 pixels	382 x 288 pixels
Spectral range	8 – 14 μm	8 – 14 μm
Temperature ranges	−20 100 °C 0 250 °C (20) 150 900 °C¹)	−20 100 °C 0 250 °C (20) 150 900 °C¹)
Frame rate	50 Hz	80 Hz / 27 Hz
Optics (FOV)	30° (f = 5.1 mm) 12° (f = 12.7 mm) 55° (f = 3.1 mm) 80° (f = 2.3 mm)	29° x 22° (f = 12.7 mm) 18° x 14° (f = 20 mm) 53° x 38° (f = 7.7 mm) 80° x 54° (f = 5.7 mm)
New: Microscope optics	-	18° x 14° (f = 20 mm), smallest measuring spot: 90 $\mu$ m (IFOV)
Focus	Manual motor focus	Manual motor focus
Optical resolution (D:S)	190:1 (12° optics)	390:1 (18° optics)
Thermal sensitivity (NETD)	100 mK	80 mK
System accuracy (at T <sub>Amb</sub> = 23 ±5 °C)	±2 °C or ±2 %, whichever is greater	±2 °C or ±2 %, whichever is greater
PC interfaces	USB 2.0 / Ethernet (100 Mbit/s) / PoE	USB 2.0 / optional USB to GigE (PoE) interface
Direct in-/outputs / Standard process interface (PIF)	1x 0/4–20 mA output 1x input (analog or digital) Optically isolated	1x 0–10 V input 1x digital input (max. 24 V) 1x 0–10 V output
Industrial process interface (PIF)	3x analog outputs (0/4–20 mA or 0–10 V) or alarm OUT (relais) 3x inputs (analog or digital), fail-safe (LED and relay), stackable up to 3 PIFs; optically isolated	2 x 0–10 V inputs, 1 x digital input (max. 24 V), 3x 0/4-20 mA outputs, 3 x relay (0–30 V / 400 mA), faile-safe relay
Cable length (USB)	USB: 1 m (standard), 3 m, 5 m, 10 m and 20 m Ethernet / RS485: 100 m	USB: 1 m (standard), 3 m, 5 m, 10 m and 20 m
Ambient temperature (T <sub>Amb</sub> )	0 °C 50 °C	0°C50°C
Size / class	Ø 36 x 90 mm (M30x1 thread) / IP 67 (NEMA 4)	Ø 36 x 100 mm (M30x1 thread) / IP 67 (NEMA 4)
Weight (without mounting bracket)	201 - 210 g (depending on lens)	216 - 220 g (depending on lens)
Shock / Vibration <sup>2)</sup>	IEC 60068-2	IEC 60068-2
Power supply	USB / PoE / 5-30 VDC	via USB
Scope of supply (standard)	Xi camera     USB cable (1 m)     Cable for in-/outputs (1 m) with terminal block     Mounting bracket with tripod thread, mounting nut     Software package optris PIX Connect     Quick start guide	Xi camera     USB cable (1 m)     Cable for in-/outputs (1 m) with terminal block     Mounting bracket with tripod thread, mounting nut     Software package optris PIX Connect     Quick start guide



#### Microscope optics for the inspection of assembled circuit boards

The new microscope optics for the **optris Xi 400** infrared camera allows reliable temperature measurement on tiny objects from **240** µm (MFOV). In combination with a suitable stand, this enables professional measurement of printed circuit boards and components in the electronics industry. The measuring distance between camera and object is variable between 90 and 110 mm. Due to the built-in motor focus, the camera can be easily mounted in the supplied PIX Connect software focus. For measuring even smaller objects we recommend the PI 640 microscope optics, **smallest measuring spot: 28** µm (IFOV).

Further information on page 12.

www.optris.global/optris-xi-400-microscope-optics

<sup>1)</sup> Accuracy effective starting at 150 °C 2) For further details see operator's manual

#### Accessories Xi infrared cameras

#### **EXPANSION OPTIONS**



#### Air purge unit

#### Features:

- The air purge attachment can be used in combination with the water cooled housing and protects the optics from contamination
- Used in rough and dusty areas to guarantee a reliabe temperature measurement

Part number: ACXIAPL + ACXIAPLAB

(Mounting bracket)



#### Water cooled housing

#### Features:

- The rugged water cooled housing allows the Xi infrared cameras to be employed in hot environments up to 250°C
- Respective heat-resistant cables are also available

Part number: ACXIW



#### **Shutter**

#### Features:

- In addition Xi cameras can be equipped with a shutter
- The shutter protects the optics from falling parts within a response time of 100 ms

Part number: ACXISCBxx\*

\*xx = for different cable lengths



#### Outdoor protective housing for Xi series

#### Features:

- Environmental rating IP 66
- Additional air purge collar allows continuous operation in dusty and humid environments
- Heating element and built-in fan enable for a 24/7 operation from -40 °C to 50 °C
- Installation of USB Server Gigabit 2.0 and industrial process interface possible for integration into control systems over large outdoor distances





#### USB server Gigabit 2.0 for Xi 400

#### Features:

- Fully USB 2.0 compatible,
   Data rates: 1.5 / 12 / 480 mbps,
   USB transfer mode: Isochronous
- · Network connection via Gigabit Ethernet
- Full TCP/IP support incl. routing and DNS
- · Two independent USB ports
- Supply from PoE or external power supply with 24 – 48 V DC
- Galvanic isolation 500 V<sub>RMS</sub> (network connection)
- Remotely configurable via Web Based Management
- Proven technology from Wiesemann & Theis

Part number: ACPIUSBSGB



#### Industrial process interface (PIF) for Xi series

#### Features:

- Industrial process interface for Xi 400 with 3 analog/alarm outputs, 2 analog inputs, 1 digital input, 3 alarm relays
- Industrial process interface for Xi 80 with 3 analog-/alarm outputs, 3 inputs (analog or digital), 3 alarm relays
- 500 VAC<sub>RMS</sub> isolation voltage between camera and process
- · Separate fail-safe relay output
- Xi hardware including all cable connections and PIX Connect software are permanently observed during operation
- Option Xi 80: stackable up to 3 PIFs

Part number: Xi 80: ACXIPIFCBx\*
Part number: Xi 400: ACPIPIFMACBx\*

### optris PI infrared cameras - Precision Line

#### Optics calculator: www.optris.global/optics-calculator

Compact infrared cameras with high resolution for fast online applications and exchangeable lenses, including line scan function







		0		
Basic model		PI 400i / PI 450i	PI 640	PI 640 Microscope optics
Туре		IR	IR	IR
Detector		FPA, uncooled (17 µm pitch)	FPA, uncooled (17 µm pitch) FPA, uncooled (17 µm	
Optical resolution		382 x 288 pixels	640 x 480 pixels VGA 640 x 120 pixels @ 125 Hz	640 x 480 pixels @ 32 Hz 640 x 120 pixels @ 125 Hz
Spectral range		8 – 14 µm	8 – 14 μm	8 – 14 μm
Temperature range	es	-20 100 °C 0 250 °C, (20) 150 900 °C1) 200 1500 °C (option)	-20 100 °C 0 250 °C (20) 150 900 °C <sup>1)</sup> 200 1500 °C (option)	-20 100 °C 0 250 °C (20)150 900 °C <sup>1)</sup> 200 1500 °C (option)
Frame rate		80 Hz / switchable to 27 Hz	32 Hz / 125 Hz in subframe mode (640x120 pixels)	32 Hz / 125 Hz in subframe mode (640 x 120 pixels)
Optics (FOV)		29° x 22° / f = 12.7 mm or 18° x 14° / f = 20 mm or 53° x 38° / f = 7.7 mm or 80° x 54° / f = 5.7 mm	33° x 25° / f = 18.7 mm or 15° x 11° / f = 41.5 mm or 60° x 45° / f = 10.5 mm or 90° x 64° / f = 7.7 mm	12° x 9° (F=1.1) / f= 44 mm Smallest measuring spot: 28 μm
Thermal sensitivity (NETD)		PI 400i: 75 mK with 29°, 53°, 80° FOV PI 450i: 40 mK with 29°, 53°, 80° FOV optics mentioned above: F = 0.9 PI 400i: 0.1 K with 18° FOV / F = 1.1 PI 450i: 60 mK with 18° FOV / F = 1.1	75 mK	120 mK
System accuracy (	at T <sub>Amb</sub> = 23 ±5 °C)	±2 °C or ±2 %, whichever is greater	±2 °C or ±2 %, whichever is greater	±2 °C or ±2 %, whichever is greater
Temperature coeffi	cient	±0,05 % / K <sup>2)</sup>	±0,05 % / K <sup>2)</sup>	±0,05 % / K <sup>2)</sup>
PC interfaces		USB 2.0 / optional USB to GigE (PoE) Interface	USB 2.0 / optional USB to GigE (PoE) Interface	USB 2.0 / optional USB to GigE (PoE) Interface
Process interface (PIF)	Standard PIF	1x 0-10 V input, 1x digital input (max. 24 V), 1x 0-10 V output	1x 0 – 10 V input, 1x digital input (max. 24 V), 1x 0 – 10 V output	1x 0 – 10 V input, 1x digital input (max. 24 V), 1x 0 – 10 V output
	Industrial PIF (optional)	2x 0 – 10 V input, 1x digital input (max. 24 V), 3x 0 /4 – 20 mA output, 3x relays (0 – 30 V / 400 mA), 1x fail-safe-relay	2x 0 – 10 V input, 1x digital input (max. 24 V), 3x 0 /4–20 mA output, 3x relays (0 – 30 V / 400 mA), 1x fail-safe-relay	2x 0-10 V input, 1x digital input (max. 24 V), 3x 0/4-20 mA output, 3x relays (0-30 V / 400 mA), 1x fail-safe-relay
Ambient temperatu	ure (T <sub>Amb</sub> )	PI 400i: 0 50 °C / PI 450i: 0 70 °C	0 50 °C	0 50 °C
Storage temperatu	ire	PI 400i: -4070 °C PI 450i: -40 85 °C	−40 70 °C	-40 70 °C
Relative Humidity		10-95 %, non-condensing	10-95 %, non-condensing	10-95 %, non-condensing
Size / class		$46\ x\ 56\ x\ 68-77\ mm$ (depending on lens and focus position)/ IP 67 (NEMA 4)	$46\ x\ 56\ x\ 76$ - $100\ mm$ (depending on lens and focus position)/ IP 67 (NEMA 4)	$46 \times 56 \times 119$ - $126$ mm (depending on lens and focus position)/ IP 67 (NEMA 4)
Weight		237 - 251 g, depending on lens	269 - 340 g, depending on lens	370 g, incl. lens
Shock / Vibration <sup>3)</sup>		IEC 60068-2	IEC 60068-2	IEC 60068-2
Tripod mount		1/4 - 20 UNC	1/4 - 20 UNC	1/4 - 20 UNC
Power supply		via USB	via USB	via USB
Scope of supply (standard)		USB camera with 1 lens USB cable (1 m) Table tripod PIF cable with terminal block (1 m) Manual Aluminum case (PI 400i) Rugged outdoor case (PI 450i) Software package optris PIX Connect	USB camera with 1 lens USB cable (1 m) Table tripod PIF cable with terminal block (1 m) Manual Rugged outdoor case Software package optris PIX Connect	USB camera with lens kit (standard lens [PI 640: O33], microscope lens [MO44]) Microscope stand Standard USB cable (1 m) Standard-PIF Manual Rugged outdoor case Software package optris PIX Connect

<sup>&</sup>lt;sup>1)</sup> Accuracy effective starting at 150 °C 
<sup>2)</sup> For  $T_{Amb}$  10...50 °C and  $T_{Obj} \le 500$  °C; otherwise:  $\pm$  0,1 K/K or 0,1%/K (whichever is greater)

<sup>3)</sup> For further details see operator's manual





PI 450i G7	PI 640 G7
IR	IR
FPA, uncooled (17 μm pitch)	FPA, uncooled (17 μm pitch)
382 x 288 pixels	640 x 480 pixels
7.9 µm	7.9 µm
150 900 °C 200 1500 °C	150 900 °C 200 1500 °C
80 Hz / switchable to 27 Hz	32 Hz / 125 Hz in subframe mode (640x120 pixels)
29° x 22° / f = 12.7 mm or 18° x 14° / f = 20 mm or 53° x 38° / f = 7.7 mm or 80° x 54° / f = 5.7 mm	33° x 25° / f = 18.7 mm or 15° x 11° / f = 42 mm or 60° x 45° / f = 10.5 mm or 90° x 64° / f = 7.7 mm
150 mK 175 mK (with 18 ° FOV)	130 mK 150 mK (with 15 ° FOV)
±2 °C or ±2 %, whichever is greater	±2 °C or ±2 %, whichever is greater
-	-
USB 2.0 / optional USB to GigE (PoE) Interface	USB 2.0 / optional USB to GigE (PoE) Interface
1x 0 – 10 V input, 1x digital input (max. 24 V), 1x 0 – 10 V output	1x 0 – 10 V input, 1x digital input (max. 24 V), 1x 0 – 10 V output
2x 0 – 10 V input, 1x digital input (max. 24 V), 3x 0 /4– 20 mA output, 3x relays (0 – 30 V / 400 mA), 1x fail-safe-relay	2x 0-10 V input, 1x digital input (max. 24 V), 3 x 0 /4-20 mA output, 3 x relays (0-30 V / 400 mA), 1x fail-safe-relay
070°C	050°C
–40 85 °C	–40 70 °C
10-95 %, non-condensing	10-95 %, non-condensing
46 x 56 x 68 – 77 mm (depending on lens and focus position)/ IP 67 (NEMA 4)	46 x 56 x 76 – 100 mm (adepending on lens and focus position)/ IP 67 (NEMA 4)
237 - 251 g, depending on lens	269 - 340 g, depending on lens
IEC 60068-2	IEC 60068-2
1/4-20 UNC	1/4 - 20 UNC
via USB	via USB
USB camera with 1 lens USB cable (1 m) Table tripod PIF cable with terminal block (1 m) Manual Rugged outdoor case Software package optris PIX Connect	USB camera with 1 lens USB cable (1 m) Table tripod PIF cable with terminal block (1 m) Manual Rugged outdoor case Software package optris PIX Connect

### optris PI infrared cameras - Precision Line

#### Optics calculator: www.optris.global/optics-calculator

Compact infrared cameras with high resolution for fast online applications and exchangeable lenses, including line scan function







Basic n	nodel	iel PI 05M PI 08M		PI 1M			
Туре		IR		IR		IR	
Detector CMOS (15 μ		CMOS (15 µm pitch)		CMOS (15 µm pitch)		CMOS (15 µm pitch)	
Optical resolution		764 x 480 pixels @ 32 Hz 382 x 288 pixels @ 80 Hz (switchable to 27 Hz) 72 x 56 pixels @ 1 kHz 764 x 8 pixels @ 1 kHz (fast line scan mode)		764 x 480 pixels @ 3 382 x 288 pixels @ 8 27 Hz) 72 x 56 pixels @ 1 kl 764 x 8 pixels @ 1 kl mode)	80 Hz (switchable to Hz	764 x 480 pixels @ 3 382 x 288 pixels @ 8! (switchable to 27 Hz) 72 x 56 pixels @ 1 k 764 x 8 pixels @ 1 k	) Hz
Spectral ra	ange	500 – 540 nm		780 – 820 nm		0.85 – 1.1 μm	
Temperatu	re range	900 2450 °C (27 ) 950 2450 °C (32 / 1100 2450 °C (1 kF	80 Hz mode)	ode) 625 1900 °C (32 / 80 Hz mode)		450 <sup>1)</sup> 1800 °C (27 Hz mode) 500 <sup>1)</sup> 1800 °C (80 Hz and 32 Hz mode) 600 <sup>1)</sup> 1800 °C (1 kHz mode)	
Frame rate	•	Up to 1 kHz / 1 ms re (0 - 10 V) of 8 x 8 pixe	al time analog output els (freely selectable)	Up to 1 kHz / 1 ms re (0 - 10 V) of 8 x 8 pix			eal time analog output cels (freely selectable)
Optics (FC	OV)	FOV @764 x 480 px: 26° x 16° (f = 25 mm)	FOV@382 x 288 px: 13° x 10° (f = 25 mm)	FOV @ 764 x 480 px: 39° x 25° (f = 16 mm) 26° x 16° (f = 25 mm)	FOV @ 382 x 288 px: 20° x 15° (f=16 mm) 13° x 10° (f=25 mm)	FOV @764 x 480 px: 39° x 25° (f = 16 mm) 26° x 16° (f = 25 mm) 13° x 8° (f = 50 mm) 9° x 5° (f = 75 mm)	FOV @ 382 x 288 px: 20° x 15° (f = 16 mm) 13° x 10° (f = 25 mm) 7° x 5° (f = 50 mm) 4° x 3° (f = 75 mm)
Thermal so	ensitivity NETD <sup>2)</sup>	< 2 K (< 1400 °C) < 4 K (< 2100 °C)		< 2 K (< 1000 °C) < 4 K (< 1600 °C)		< 2 K (< 900 °C) < 4 K (< 1400 °C)	
System ac (at T <sub>Amb</sub> = 2		For object temperatur ±1 % of reading for 27/ ±1,5 % of reading for 1 For object temperatur ±2 % of reading for 27/ ±2,5 % of reading for 1	32/80 Hz kHz <b>°e &gt; 2000 °C:</b> 32/80 Hz	For object temperatur ±1 % of reading for 27/ ±1,5 % of reading for 1 For object temperatur ±2 % of reading for 27/ ±2,5 % of reading for 1	32/80 Hz kHz re > <b>1500 °C:</b> 32/80 Hz	For object temperat ±1 % of reading for 2 ±1,5 % of reading fo For object temperat ±2 % of reading for 2 ±2,5 % of reading fo	27/32/80 Hz r 1 kHz tu <b>re &lt; 1600°C:</b> 27/32/80 Hz
PC interfac	ces	USB 2.0 / optional US Interface	Bzu GigE (PoE)	USB 2.0 / optional US Interface	B zu GigE (PoE)	USB 2.0 / optional US Interface	B zu GigE (PoE)
Process Interface (PIF)	Standard PIF	1x 0 – 10 V input, 1x digital input (max. 1x 0 – 10 V output	24 V),	1x 0 – 10 V input, 1x digital input (max. 1x 0 – 10 V output	24 V),	1x 0 – 10 V input, 1x digital input (max. 1x 0 – 10 V output	24 V),
	Industrial PIF (optional)	2x 0 – 10 V inputs, 1x digital input (max. 3x 0/4-20 mA outputs 3x relays (0 – 30 V/ 4 1x fail-safe relay	,	2x 0 – 10 V inputs, 1x digital input (max. 3x 0/4 – 20 mA outpu 3x relays (0 – 30 V / 4 1x fail-safe relays	ts,	2x 0 – 10 V inputs, 1x digital input (max. 3x 0/4-20 mA outputs 3x relays (0 – 30 V / 4 1x fail-safe relays	,
Ambient te	mperature (T <sub>Amb</sub> )	550 °C		5 50 °C		550 °C	
Storage te	mperature	– 40 70 °C		– 40 70 °C		– 40 70 °C	
Relative H	umidity	10 – 95 %, non-conde	ensing	10-95 %, non-condensing		10-95 %, non-cond	ensing
Size / clas	s	46 x 56 x 88 – 129 mm (depending on lens an IP 67 (NEMA 4)		46 x 56 x 88 – 129 m (depending on lens a IP 67 (NEMA 4)	nm with protection tube and focus position) /	46 x 56 x 88 – 129 m (depending on lens a IP 67 (NEMA 4)	nm with protection tube and focus position) /
Weight		245 - 311 g, depenpi	ng on lens	245 - 311 g, depending on lens		245 - 311 g, dependi	ng on lens
Shock / Vi	oration <sup>4)</sup>	IEC 60068-2		IEC 60068-2		IEC 60068-2	
Tripod mount		1/4-20 UNC		1/4-20 UNC		1/4-20 UNC	
Power supply		via USB		via USB		via USB	
Scope of s	upply (standard)	USB camera with 1 Lens tube incl. prote USB cable (1 m) Table tripod PIF cable with term Software package of Manual Aluminum case Optional: CoolingJa	ective window inal block (1 m) optris PIX Connect	USB camera with 1 Lens tube incl. prot USB cable (1 m) Table tripod PIF cable with term Manual Software package of Aluminum case Optional: CoolingJa	ective window inal block (1 m) optris PIX Connect	USB camera with 1 Lens tube incl. prot USB cable (1 m) Table tripod PIF cable with term Manual Software package of Aluminum case Optional: CoolingJa	ective window inal block (1 m) optris PIX Connect

<sup>1)</sup> Accuracy effective starting at +75 °C with optics (f = 50 mm and f = 75 mm) 2) Specified NETD value applies to all frequencies 3) At an ambient temperature of +25 °C 4) For further details see operator's manual

#### optris CoolingJacket

# UNIVERSAL PROTECTIVE HOUSING FOR COOLING UP TO 315 °C

#### Universal protection for the optris PI series in harsh industrial environments

- Operation at ambient temperatures of up to 315 °C
- Air/Water cooling with integrated air purging and optional protective windows
- Modular design for easy fitting of different devices and lenses
- Trouble-free, on the spot sensor removal via quick-release chassis
- Integration of additional components like PI NetBox, USB Server Gigabit and Industrial Process Interface (PIF) in the extended version






Technical data	CoolingJacket Advanced Standard	CoolingJacket Advanced Extended
Protective rating	IP 65	IP 65
Ambient temperature	Up to 315 °C <sup>1)</sup>	Up to 315 °C <sup>1)</sup>
Relative Humidity	10 - 95 %, non-condensing	10 - 95 %, non-condensing
Material (Housing)	V2A	V2A
Dimensions	271 x 166 x 182 mm	426 x 166 x 182 mm
Weight	5.7 kg	7.8 kg
Air purge collar	G1/4" internal thread G3/8" external thread	G1/4" internal thread G3/8" external thread
Cooling water fittings	G1/4" internal thread G3/8" external thread	G1/4" internal thread G3/8" external thread
Cooling water pressure	max. 15 bar (217 psi)	max. 15 bar (217 psi)
Scope of supply	CoolingJacket     Advanced,consisting of     housing with mounting bra-     ckets, chassis and focusing     unit respectively front part <sup>2)</sup>	<ul> <li>CoolingJacket Advanced, consisting of housing with mounting brackets,chassis and focusing unit respectively front part<sup>2)</sup></li> </ul>
	Installation instructions	<ul> <li>Mounting accessories for         <ul> <li>PI Netbox or USB-Server</li> <li>Gigabit 2.0</li> <li>Industrial PIF</li> </ul> </li> <li>Installation instruction</li> </ul>


<sup>&</sup>lt;sup>1)</sup> Cable for up to 250 °C ambient temperature as well as cable cooling for up to 315 °C available.

#### **Dimensions** in mm

#### CoolingJacket Advanced - Standard-Version



#### CoolingJacket Advanced – Extended-Version




<sup>&</sup>lt;sup>2)</sup> Focusing unit and front part are exchangeable and have to be ordered separately.

#### optris Laminar air purge

#### AIR PURGE FOR RUGGED ENVIRONMENTS

# Laminar air purge for rugged environments


- Protection for rugged environments
- Air and water cooling, flexible laminar air stream for protection from dirt and dust
- Easy maintenance due to folding mechanism
- Focussable from the outside once installed
- Protection window for mechanical protection integrated
- Also available as line scanner version

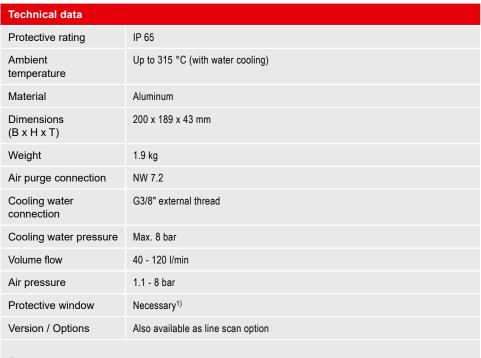


<sup>1)</sup> A protective window (67 x 3 mm) has to be ordered separately.

#### Dimensions in mm


#### Laminar air purge: standard model

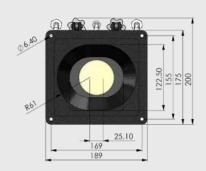

#### Laminar air purge: line scan model

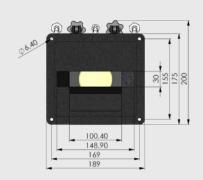

#### Laminar air purge: connections

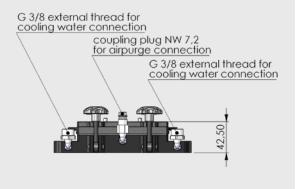

#### optris Industrial Process Interface

#### WITH FAIL-SAFE MONITORING

# Camera and process control for use in industrial environment

- Industrial Process Interface for PI series and Xi 400 with 3 analog-/alarm outputs, 2 analog inputs, 1 digital input, 3 alarm relays
- Industrial Process Interface for Xi 80 with 3 analog-/alarm outputs, 3 inputs (analog or digital), 3 alarm relays
- 500 V AC<sub>RMS</sub> isolation voltage between camera and process

- Separate fail-safe relay output
- The PI / Xi hardware with all cable connections and the PIX Connect software are permanently monitored during operation
- Combination of up to 3 PIFs when using the Xi 80





General specifications	
Protective rating	IP65 (NEMA-4)
Ambient temperature	−30 °C 85 °C
Storage temperature	−30 °C 85 °C
Humidity	10-95 % (non-condensing)
Vibrational stability	IEC 60068-2-6 (non-condensing)/ IEC 60068-2-64 (broadband noise)
Shock stability	IEC 60068-2-27 (25 G and 50 G)
Weight	610 g (with 5 m HT cable)
Cable lengths	5 m HT cable (standard), optional 10 m and 20 m

Electrical specifications			
	Xi 80	PI series and Xi 400	
Power supply	5 – 24 V DC	5-24 V DC	
LED display	2 green LEDs for voltage and fail-safe / 3 red LEDs for status of alarm relays	2 green LEDs for voltage and fail-safe / 3 red LEDs for status of alarm relays	
Isolation	$500~\mathrm{V}~\mathrm{AC}_\mathrm{RMS}$ between camera and process	$500~\text{V}~\text{AC}_\text{RMS}$ between camera and process	
Outputs	3 analog-/ alarm outputs / 3 alarm relays	3 analog-/ alarm outputs / 3 alarm relays <sup>1</sup>	
Inputs	3 inputs (analog or digital)	2 analog inputs / 1 digital input	
Ranges	0/4–20 mA or 0–10 V (for A0 1–3)²), 0–10 V or 24 V (for inputs 1–3), 0–30 V/400 mA (for alarm relays DO 1–3)	0/4-20 mA (for AO 1-3) <sup>2),</sup> 0-30 V / 400 mA (for alarm relays DO1-3), 0-10 V (for Al 1-2) / 24 V (for DI)	

Programmable fund	Programmable functions		
Analog inputs	Emissivity settings     Reference temperature     Triggered snapshots, triggered triggered event grabber	Ambient temperature compensation     Uncommitted value     Flag control ed recordings, triggered line scan camera,     Reset peak-/valley hold	
Digital inputs	Flag control     Triggered snapshots, triggered triggered event grabber	ed recordings, triggered line scan camera, • Reset peak-/valley hold	
Analog outputs	Main measurement range     Measurement range     Internal temperature     Flag status	<ul><li>Alarm</li><li>Frame synchronisation</li><li>Fail-safe</li><li>External communication</li></ul>	
<sup>1)</sup> Active when AO1, 2 or 3 is / are programmed as alarm output <sup>2)</sup> Dependent on supply voltage			

#### optris PI NetBox

#### MINI PC FOR OPTRIS PI SERIES

# Stand alone solution for optris PI series

- Miniatur PC as an add-on to the PI series for stand-alone system of for cable extension via GigE
- Integrated hardware and software watchdog
- Installation of additional user software possible
- Status LEDs
- Processor: Intel Atom® E3940 Quad Core 1.6 / 1.8 GHz (Turbo), 32 GB SSD, 4 GB RAM
- Connections: 2x USB 2.0, 1x USB 3.0, 1x Mini USB 2.0, Micro HDMI, Ethernet (Gigabit Ethernet), Micro SDHC / SDXC card
- Operating system:
   Windows 10 Enterprise
- Wide supply voltage range (8 48 VDC) or Power over Ethernet (PoE)
- Can be integrated with CoolingJacket Advanced




General specifications	
Ambient temperature	0 °C 50 °C
Storage temperature	−20 °C 75 °C
Relative Humidity	10-95 %, non-condensing
Material (Housing)	Anodized aluminum
Size	113 x 57 x 47 mm
Weight	385 g
Vibration	IEC 60068-2-6 (sinusoidal) / IEC 60068-2-64 (broadband noise)
Shock	IEC 60068-2-27 (25 G and 50 G)
Operating system	Windows 10 Enterprise
Electrical specifications	
Voltage supply	8-48 V DC or Power over Ethernet (PoE/ 1000BASE-T)
Power consumption	7.5 W (+ additional 2.5 W for PI camera)

Electrical specifications		
Voltage supply	8-48 V DC or Power over Ethernet (PoE/ 1000BASE-T)	
Power consumption	7.5 W (+ additional 2.5 W for PI camera)	
Cooling	Active via two integrated fans	
Module	COM Express® mini embedded board	
Processor	Intel Atom® E3940 Quad Core 1.6 / 1.8 GHz (Turbo)	
Hard drive	32 GB SSD	
RAM	4 GB (DDR2, 533 MHz)	
Connections	2x USB 2.0, 1x USB 3.0, 1x Mini-USB 2.0, Micro-HDMI, Ethernet (Gigabit Ethernet)	
Memory card slots	Micro SDHC/ SDXC card	
Additional features	4x Status-LEDs	

#### Stand-alone solution with GigE remote access



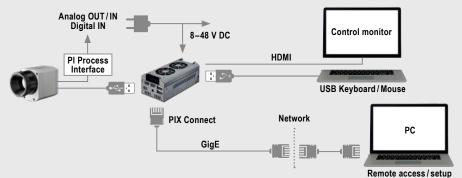

#### optris USB-Server Gigabit 2.0

#### SIMPLE CABLE EXTENSION

#### Simple cable extension for the optris PI series and Xi 400


- Fully compatible with USB 2.0, Data transfer rate 1.5 / 12 / 480 Mbps, USB transfer mode: isochronous
- · Network connection via Gigabit Ethernet
- · For all models in the optris PI series and the Xi 400
- Full TCP/IP support incl. routing and **DNS**
- Two independent USB connections
- Power via PoE or external voltage supply at 24 - 48 V DC
- Galvanic isolation 500 VRMS (network connection)
- Remote configuration via web-based management
- Certified technology from Wiesemann & Theis



Technical data	
USB connections	2 x USB A Port
USB speed	480 Mbps
Nework	10/100/1000 BaseT (max. 1000 Mbps)
Power supply	Power over Ethernet (PoE) class 3 (6,49 – 12.95 W) or via screw terminal DC 24 V 48 V (+/–10 %)
Power consumption	External power supply (24 V DC) without USB devices: typ. 120 mA External power supply (24 V DC) with 2 USB devices each 2.5 W: typ. 420 mA
Ambient temperature	Storage: -40 85 °C In operation, individually assembled: 0 50 °C
Permissible relative humidity	0-95 % (non-condensing)
Housing	Compact blastic casing for DIN rail mount, 105 x 75 x 22 mm
Weight	200 g
Scope of supply	1x USB server Gigabit 2.0     24 V DC wall plug transformer     Ethernetcable (1m)     Quick start guide*     *included on USB-Stick     Software PIX Connect resp. CompactConnect     USB-Redirector     WuTility Management Tool     Manual (DE / EN)

#### **Protocols** USB protocols USB 1.0 / 1.1 / 2.0 Control / Bulk / Interrupt / Isochronous Protocols for direct TCP/IP: Socket network connection Auxiliary protocols: ARP, DHCP, HTTP, PING Inventory keeping, group management

#### **Connection options**

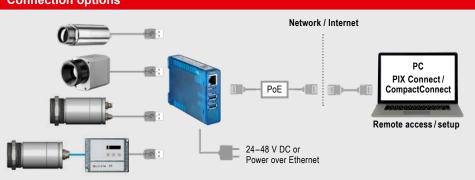

#### optnis Outdoor Protective Housing

#### UNIVERSAL PROTECTIVE HOUSING FOR IR CAMERAS


Universal outdoor protection for infrared cameras of the optris PI and Xi series

- Environmental rating IP 66
- Additional air purge collar allows for a continuous operation in dusty and humid conditions
- Heating element and built-in fan enable for a 24/7 operation from -40 °C to 50 °C
- Optional Installation of USB Server Gigabit for integration into control systems over large outdoor distances



Specifications	
Environmental rating	IP 66
Ambient temperature	−40 50 °C
Heating	PTC heater (automatically starting at T< 15 °C) / fan for homogeneous temperature distribution
Power supply	24 V DC
Power	70 W
Protective window	Germanium (Ge), zinc sulfide (ZnS), Borofloat or foil
Air purge collar	Integrated
Air pressure	Absolute pressure 1,1 - 8 bar at 20 -100 l/min
Max. FOV	90° (HFOV)
Integrated additional components	USB-Server Gigabit 2.0 Industrial Process interface (PIF)
Material	Aluminum
Weight	2 kg (with wall mount 2,5 kg)
Accessories	Optional wall mount bracket

#### Example of fail-safe monitoring of the PI camera with connected PLC

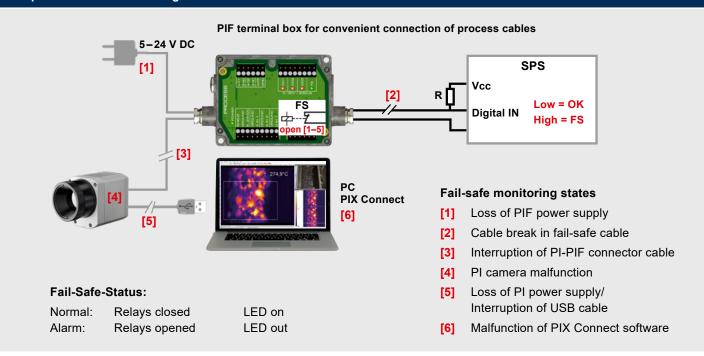

#### optris IRmobile

**APP** 

#### Tool for all optris infrared cameras





- The cameras of the PI series have a direct connection to an android smartphone or tablet
- IRmobile App downloadable for free from the Google Play Store
- For connection to the device the IR App Connector is recommended

Xi 80: Artikel-Nr.: ACXI80IACM (Micro-USB) or ACXI80IACC (USB-C) Xi 400: Artikel-Nr.: ACPIIACM (Micro-USB) or ACPIIACC (USB-C)



#### IRmobile app features:

- Live IR image with automatic hot and cold spot
- Adjustable camera features like temperature measuring range, frame rate and selectable color palettes
- Changing the temperature unit: Celsius or Fahrenheit
- · Creating snapshots
- Integrated simulator



#### Supported for

- PI and Xi series and all pyrometers
- For android devices from version 5.0 or higher with micro-USB or USB-C connectors that support USB OTG










#### optris PIX Connect

#### SOFTWARE

# Comprehensive IR camera software

- · No additional costs or licensing restrictions
- · Modern software with intuitive user interface
- · Remote control of camera
- · Display of numerous images in different windows
- Compatible with Windows 7, 8 and 10
- Two Software Development Kits for Windows and Linux included
- · Various language options, incl. translation function
- Temperature display in °C or in °F

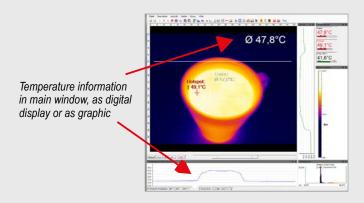

Our layouts – as individual as your applications

Pre-defined layouts make it quick and easy to start with your applications. And because we know that every measurement task has its own individual requirements, we have ensured that it is quite easy to adapt the preset layout to suit your individual requirements.


The user interface of the PIX Connect software can also be adapted to suit your personal workflow: Software windows can be easily arranged using drag & drop; in the toolbar you can save shortcuts for functions relevant to your application – or even remove links which you do not need

Regardless of whether you are working on a desktop PC or a tablet, the user interface can be adapted.


The PIX Connect software makes a wide range of preset color palettes available. This allows optimal depiction of thermal contrasts. The pre-defined color palettes can be individually adapted to be able to cater for the specific requirements of your respective application.

Associated temperature groups (isotherms) can be identified by color markers and highlighted.

It is also possible to define temperature values in advance; pixels above, below, or between these values are highlighted in color.








Palette Rainbow


# The right color palette for every application



Palette Blue Hi

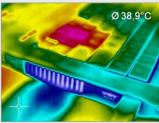

Palette Rainbow Hi

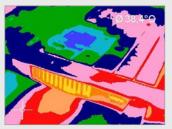


Palette Rainbow Medical



Palette Gray (Black = Cold)

#### **Measuring areas**

## It is not just a matter of size, but also depends on the content: designing a suitable measurement area

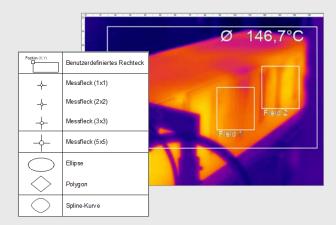

The size and shape of measurement area can be freely designed and moved. For an easy introduction, a large selection of pre-defined measurement area shapes is available.


You can set up as many measurement areas as you like in the camera's field of view. To do this, it is possible to make a distinction between main and ancillary fields.

Various modes can be set in a measurement area, such as minimum value, maximum value, or average value, or you can rule out the detection of hot or cold spots.

The separate setting of the emissivity for measurement areas allows various material surfaces to be monitored with a single camera.

Differences and averaging between different measurement areas are easy to calculate with the PIX Connect software.

Saved measurement areas can be displayed as an image, a digital display or a diagram and can then be saved for further analysis.

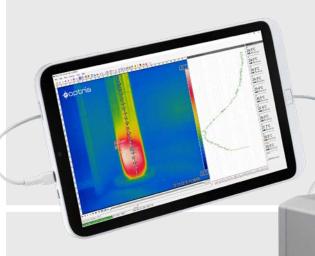



# **Graphic display** of the temperature values

Temperature values can be shown along a straight line as temperature profiles as well as as 3D diagrams.

A temperature/time diagram can be used to analyze the temperature development over time. Individual time sections can be lifted out of the diagram and be analyzed in detail by zooming in and out.

Diagrams defined in this way can be exported from the software and be saved in Excel for further analysis.

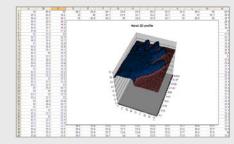

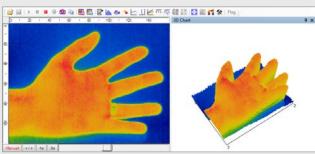


#### optris PIX Connect

#### **FEATURES**

#### Recording and display

# Recording video sequences – for later analysis and documentation

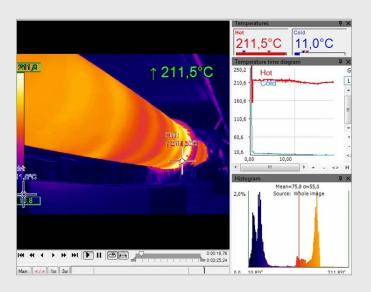

The software can be used to save the recording from the thermal imaging camera as video sequences which can then be saved for analysis later on. The video sequence is recorded for every pixel including all temperature information. An integrated screen capture function makes it simple to retrospectively generate videos in wmv format.

Videos recorded can be processed retrospectively. For example, individual sections can be cut out of a recording and can be saved as an independent sequence.

Saved video recordings are available for analysis. The sequences can be played back in slow motion or time lapse for this purpose. It is also possible to play back as a continuous loop.


#### **Event grabber**

The snapshot option works like a screenshot; an individual image is recorded from the live picture. This snapshot is a radiometric image (\*.tiff), where all the temperature and measurement area information at the time of the recording is saved for every pixel.


Saving and exporting the image for further analysis in Excel is possible thanks to the option of saving the temperature matrix in text format, e.g. as comma-separated values (.csv format). It is also possible to continue processing the image data with standard programs such as Photoshop or Windows Media Player.

Sections of the saved image can be zoomed in to get a closer look. 3D display is also possible.


# Snapshots – all temperature information in one picture

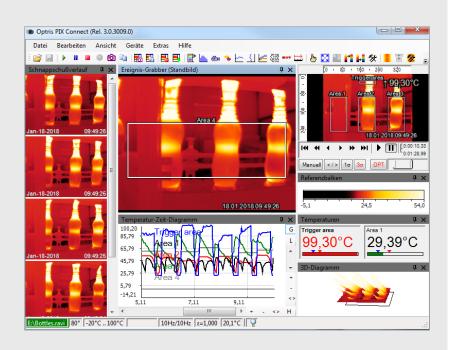

#### Merging

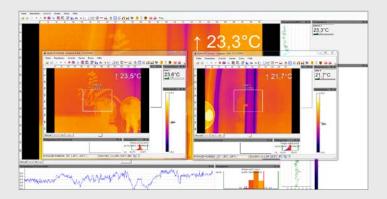

The fields of vision of three cameras (top) are converted into one single image via the merging function. (bottom)

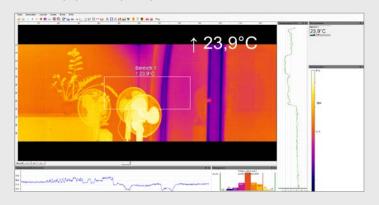

# The merging function combines several camera angles together in a single picture

The PIX Connect software gives you the option of grouping together several cameras within a software instance, i.e. the field of view of several infrared cameras are merged together to make a single picture. For processes with several control points in particular, it is helpful to concentrate the various angles on one screen. Merging several cameras also makes it possible to get an all-round view of a 3D object.


You can merge several cameras either using a direct USB connection or via Ethernet. While in the first case, every camera needs to have its own USB port; for the second option, one Ethernet connection is enough. The cameras here are each connected to the Ethernet switch on the PC via a USB Server Gigabit 2.0.

#### **Alarms**

# Defining several alarm values – allows quick intervention

Temperature dependend alarms for freely definable measurement areas as well as the internal temperature of the camera can be chosen via the software. Apart from minimum and maximum values, it is also possible to set so-called advance alarms. These will emit a warning when the measured temperature approaches the defined minimum or maximum value, therefore giving you more options and time to react.

If the measured temperature reaches one of these previously defined values, then the software will trigger an alarm. In addition to that, the critical event can be easily documented as a snapshot or video recording and be used for analysis later on.

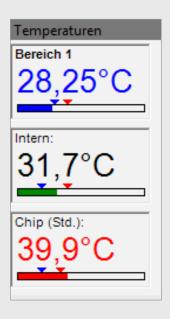

#### optris PIX Connect

#### **FEATURES**

#### For the measurement of moving objects


The optris PIX Connect software is equipped with a line scan camera function.

The line scanner is primarily used for processes involving moving measurement objects, like rotary kiln measurements or large quantities on conveyor belts (batch process).




#### The advantages


Simple monitoring of precesses with limited visual access

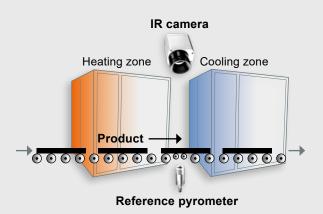

Indirect visualization of heat distribution in ovens via camera installation at oven exit



Increase in the number of pixels, e.g. from 640 pixels to 800 pixels by using diagonal screen measurement

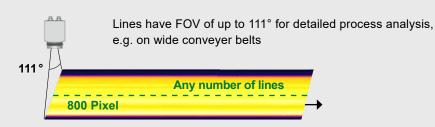

Up to 32 Hz data recording\* of unlimited lines which in turn produce a thermal image of any given resolution.

\*Up to 125 Hz data recording when using 90° in subframe mode (640 x 120px)

#### Only 3 steps to initialize the function

#### Step 1


Activation of the line scan camera function (continous, self-triggered, external trigger) and definition of the position of the lines in the thermal image. For this the camera itself serves as an orientation aid.

#### Step 2

Configuration of line scan function, e.g. number of lines displayed or set trigger for automatic saving of images.

#### Step 3

Definition of individual layouts, e.g. display of saved images in the snapshot process.

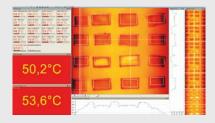

Layout example for display of line scan camera function

For further information and hands-on tutorials regarding our software PIX Connect available





or visit our website:

www.optris.global/software-tutorials

#### **Optical data**

#### **OPTICS**

# Precise measuring at various distances

A choice of lenses allows you to precisely measure objects at various distances, from close and standard distances right up to large distances. The IR cameras of the optris PI series allow for changing between several lenses.

With infrared cameras there are various parameters which display the relationship between the distance from the measuring object and the size of the pixel on the object plane. In choosing the correct lens, the following should be taken into account:


**HFOV** Horizontal expansion of the total measuring field on the object plane

**VFOV** Vertikal expansion of the total measuring field on the object plane

**IFOV** Size of individual pixels on the object plane

**DFOV** Diagonal expansion of the total measuring field on the object plane

MFOV Recommended, smallest measuring object size of 3 x 3 pixels or 2 x 2 pixels when using the PI microscope optics or the Xi 80, respectively

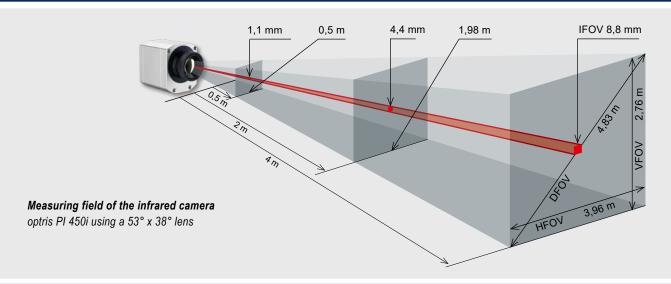

#### **Optris calculator**



- · Combines the measuring spot size calculator of the IR pyrometers and the optics calculator of the IR cameras
- · The measuring spot size of the respective device is calculated for each distance

#### IR cameras

 Based on camera/lens combination and the distance to the object, the measuring field dimensions and pixel size are calculated precisely.

 Ensures an optimal positioning of the camera and the avoidance of measuring errors

#### **Features**

- Calculates for each distance the measuring spot size of the respective device
- Always the current features through regular updates



#### **Pyrometer**

- The spot size calculator determines the exact spot size for all sensor/ optics combinations for any entered distance
- · For reliable measurements

#### Supported for

 All android devices from version 5.0 or higher





### **Optical data**

#### **OPTICS**

Xi 80	igth	ment *		Distance to measurement object [m]												
80 x 80 px	Focal length [mm]	Minimum measurement distance*	Angle		0.05	0.1	0.2	0.3	0.5	1	2	4	6	10	30	100
F05 Standard lens	5	0,2 m	30° 30° 43° 6.67 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0.028 0.028 0.039 0.33	0.056 0.056 0.079 0.67	0.111 0.111 0.158 1.33	0.167 0.167 0.24 2.0	0.279 0.279 0.39 3.33	0.557 0.557 0.79 6.67	1.115 1.115 1.58 13.33	2.230 2.230 3.15 26.67	3.346 3.346 4.7 40.00	5.6 5.6 7.9 66.67	16.7 16.7 23.7 200.00	55.8 55.8 78.9 666.67
F13 Telephoto lens	13	0,3 m	12° 12° 17° 2.66 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]		0.022 0.022 0.031 0.3	0.043 0.043 0.061 0.5	0.065 0.065 0.092 0.8	0.11 0.11 0.15 1.3	0.21 0.21 0.30 2.7	0.43 0.43 0.60 5.3	0.85 0.85 1.20 10.6	1.28 1.28 1.81 15.9	2.1 2.1 3.0 26.6	6.4 6.4 9.0 79.7	21.3 21.3 30.1 265.6
F03 Wide angle lens	3	0,2 m	55° 55° 79° 11.15 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0.057 0.057 0.080 0.6	0.110 0.110 0.156 1.2	0.218 0.218 0.308 2.3	0.325 0.325 0.459 3.4	0.539 0.539 0.762 5.6	1.07 1.07 1.52 11.2	2.14 2.14 3.02 22.4	4.27 4.27 6.04 44.6	6.41 6.41 9.06 66.9	10.7 10.7 15.1 111.5	32.0 32.0 45.3 334.5	106.7 106.7 150.9 1114.8
F02 Super wide angle lens	2	0,2 m	80° 80° 113° 15.45 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0.090 0.090 0.127 0.08	0.174 0.174 0.246 1.6	0.343 0.343 0.483 3.2	0.509 0.509 0.72 4.7	0.884 0.88 1.19 7.8	1.682 1.682 2.38 15.5	3.357 3.357 4.75 31.0	6.708 6.708 9.49 61.9	10.058 10.058 14.2 92.8	16.8 16.8 23.7 154.6	50.3 50.3 71.1 463.7	167.5 167.5 236.9 1545.5

Xi 400	ıgth	ment *		Distance to measurement object [m]												
382 x 288 px	Focal length [mm]	Minimum measurement distance*	Angle		0.05	0.1	0.2	0.3	0.5	1	2	4	6	10	30	100
F12 Standard lens	13	0.35 m	29° 22° 37° 1.3 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]		0.055 0.042 0.069 0.1	0.111 0.081 0.137 0.3	0.16 0.12 0.20 0.4	0.27 0.20 0.33 0.7	0.52 0.39 0.66 1.3	1.04 0.78 1.30 2.7	2.1 1.6 2.6 5.4	3.1 2.3 3.9 8.0	5.2 3.9 6.5 13.4	15.5 11.7 19.4 40.2	51.7 38.9 64.7 133.9
F20 Telephoto lens	20	0.35 m	18° 14° 23° 0.9 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]			0.067 0.051 0.084 0.2	0.099 0.076 0.125 0.3	0.16 0.12 0.21 0.4	0.32 0.25 0.41 0.9	0.65 0.49 0.81 1.7	1.29 0.98 1.62 3.4	1.9 1.5 2.4 5.1	3.2 2.5 4.1 8.5	9.7 7.4 12.2 25.6	32.2 24.6 40.5 85.4
F08 Wide angle lens	8	0.25 m	53° 38° 66° 2.2 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]		0.105 0.073 0.128 0.22	0.20 0.14 0.25 0.4	0.30 0.21 0.37 0.7	0.50 0.35 0.62 1.1	1.00 0.70 1.22 2.2	2.00 1.4 2.4 4.4	4.00 2.8 4.9 8.8	6.0 4.1 7.30 13.2	10.0 6.9 12.1 22.0	29.9 20.7 36.4 65.9	99.7 68.9 121.2 219.6
F06 Super wide angle lens	6	0.2 m	80° 54° 96° 3.0 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0.085 0.055 0.101 0.2	0.16 0.10 0.19 0.3	0.32 0.20 0.38 0.6	0.48 0.30 0.57 0.9	0.82 0.51 0.97 1.5	1.7 1.0 1.9 3.0	3.4 2.0 3.9 6.0	6.7 4.1 7.9 12.0	10.1 6.1 11.8 18.1	16.8 10.2 19.7 30.1	50.4 30.6 58.9 90.3	167.8 101.9 196.4 301.2

Table with examples showing which measurement field sizes and pixel sizes will be reached at which distance. For optimal configuration of the camera there are various lenses available. Wide angle lenses have radial distortion due to the angle of their aperture. The PIX Connect software has an algorithm which corrects this distortion.

The measurement accuracy of the camera may lie outside of the specifications for distances below the defined minimum measurement distance.

<sup>\*</sup>Please note: Please use the optics calculator on our website in order to calculate measurement fields with shorter measurement distances: <a href="https://www.optris.global/optics-calculator">www.optris.global/optics-calculator</a>

PI 400i / 450i PI 450i G7	ite	ار tand*		Entfernung zum Messobjekt [m]												
382 x 288 px	Brennweite [mm]	Minimaler Messabstand*	Winkel		0,05	0,1	0,2	0,3	0,5	1	2	4	6	10	30	100
O29 Standard lens	13	0,35 m	29° 22° 37° 1,3 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]		0,057 0,042 0,071 0,1	0,111 0,081 0,137 0,3	0,16 0,12 0,20 0,4	0,27 0,20 0,34 0,7	0,53 0,40 0,67 1,3	1,06 0,80 1,32 2,7	2,1 1,6 2,6 5,4	3,2 2,4 4,0 8,0	5,3 4,0 6,6 13,4	15,7 11,9 19,7 40,2	52,5 39,6 65,7 133,9
O18 Telephoto lens	20	0,45 m	18° 14° 23° 0,9 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]			0,066 0,050 0,083 0,2	0,099 0,075 0,124 0,3	0,16 0,12 0,20 0,4	0,33 0,25 0,41 0,9	0,65 0,49 0,82 1,7	1,3 1,0 1,6 3,5	1,9 1,5 2,4 5,2	3,2 2,5 4,1 8,6	9,7 7,4 12,2 25,9	32,4 24,6 40,7 86,3
O53 Wide angle lens	8	0,25 m	53° 38° 66° 2,2 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]		0,103 0,073 0,127 0,2	0,20 0,14 0,25 0,4	0,30 0,21 0,37 0,7	0,50 0,35 0,61 1,1	1,0 0,70 1,22 2,2	2,0 1,4 2,4 4,4	4,0 2,8 4,8 8,8	5,9 4,1 7,2 13,2	9,9 6,9 12,0 21,9	29,6 20,7 36,1 65,8	98,6 68,9 120,3 219,4
O80 Super wide angle lens	6	0,2 m	80° 54° 96° 3,0 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0,087 0,056 0,103 0,2	0,17 0,11 0,20 0,3	0,33 0,21 0,39 0,6	0,49 0,31 0,58 0,9	0,82 0,51 0,97 1,5	1,7 1,0 2,0 3,0	3,3 2,0 3,9 6,0	6,7 4,1 7,8 12,0	10,0 6,1 11,7 18,1	16,6 10,2 19,5 30,1	49,9 30,6 58,5 90,3	166,4 101,9 195,1 300,9

PI 640 / PI 640 G 7	ite	r tand*		Entfernung zum Messobjekt [m]											
640 x 480 px	Brennweite [mm]	Minimaler Messabstand*	Winkel		0,1	0,2	0,3	0,5	1	2	4	6	10	30	100
O33 Standardoptik	18,7	0,2 m	33° 25° 41° 0,91 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0,068 0,051 0,085 0,1	0,13 0,09 0,16 0,2	0,19 0,14 0,23 0,3	0,31 0,23 0,38 0,5	0,60 0,45 0,75 0,9	1,20 0,89 1,49 1,8	2,38 1,77 2,97 3,6	3,57 2,65 4,45 5,5	5,9 4,4 7,4 9,1	17,8 13,2 22,2 27,3	59,3 44,2 74,0 90,9
O15 Teleoptik	41,5	0,5 m	15° 11° 19° 0,41 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]				0,13 0,10 0,17 0,2	0,26 0,20 0,33 0,4	0,52 0,39 0,66 0,8	1,05 0,79 1,31 1,6	1,57 1,18 1,96 2,5	2,6 2,0 3,3 4,1	7,8 5,9 9,8 12,3	26,1 19,6 32,7 41,0
O60 Weitwinkeloptik	10,5	0,2 m	60° 45° 75° 1,62 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0,128 0,091 0,157 0,2	0,25 0,18 0,30 0,3	0,36 0,26 0,44 0,5	0,59 0,42 0,72 0,8	1,17 0,83 1,43 1,6	2,32 1,66 2,85 3,2	4,63 3,31 5,69 6,5	6,94 4,96 8,52 9,7	11,6 8,3 14,2 16,2	34,6 24,7 42,6 48,6	115,4 82,4 141,8 161,9
O90 Superweitwinkel- optik	7,7	0,2 m	90° 64° 111° 2,21 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0,220 0,138 0,260 0,2	0,43 0,27 0,50 0,4	0,63 0,39 0,73 0,7	1,03 0,64 1,21 1,1	2,03 1,27 2,39 2,2	4,04 2,53 4,76 4,4	8,06 5,05 9,50 8,8	12,07 7,57 14,24 13,2	20,1 12,6 23,7 22,1	60,3 37,8 71,1 66,2	200,8 125,9 237,0 220,8

#### **Optical data**

#### **OPTICS**

PI 1M / PI 08M <sup>1)</sup> /	igth	ment *		Distance to measurement object [m]											
PI 05M <sup>1)</sup> 382 x 288 px	Focal length [mm]	Minimum measurement distance*	Angle		0.1	0.2	0.3	0.5	1	2	4	6	10	30	100
OF16	16	0.2 m	20° 15° 25° 0.94 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]		0.07 0.05 0.09 0.2	0.11 0.08 0.13 0.3	0.18 0.14 0.22 0.5	0.36 0.27 0.45 0.9	0.72 0.54 0.90 1.9	1.43 1.08 1.79 3.8	2.15 1.62 2.69 5.6	3.6 2.7 4.5 9.4	10.7 8.1 13.5 28.1	35.8 27.0 44.9 93.8
OF25	25	0.5 m	13° 10° 16° 0.60 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0.023 0.017 0.029 0.1	0.05 0.03 0.06 0.1	0.07 0.05 0.09 0.2	0.11 0.09 0.14 0.3	0.23 0.17 0.29 0.6	0.46 0.35 0.57 1.2	0.92 0.69 1.15 2.4	1.38 1.04 1.72 3.6	2.3 1.7 2.9 6.0	6.9 5.2 8.6 18.0	22.9 17.3 28.7 60.0
OF50	50	1.5 m	7° 5° 8° 0.30 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]				0.06 0.04 0.07 0.2	0.11 0.09 0.14 0.3	0.23 0.17 0.29 0.6	0.46 0.35 0.57 1.2	0.69 0.52 0.86 1.8	1.1 0.9 1.4 3.0	3.4 2.6 4.3 9.0	11.5 8.6 14.4 30.0
OF75	75	2.0 m	4° 3° 5° 0.20 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]					0.08 0.06 0.10 0.2	0.15 0.12 0.19 0.4	0.31 0.23 0.38 0.8	0.46 0.35 0.57 1.2	0.8 0.6 1.0 2.0	2.3 1.7 2.9 6.0	7.6 5.8 9.6 20.0

Table with examples showing which measurement field sizes and pixel sizes will be reached at which distance. For optimal configuration of the camera there are various lenses available. Wide angle lenses have radial distortion due to the angle of their aperture. The PIX Connect software has an algorithm which corrects this distortion.

The measurement accuracy of the camera may lie outside of the specifications for distances below the defined minimum measurement distance.

<sup>&</sup>lt;sup>1)</sup>The optris PI 05M is only avaible with OF25 lens and the optris PI 08M is avaible with OF16 and OF25 lens.

PI 1M / PI 08M <sup>1)</sup> /	length	ment		Distance to measurement object [m]											
PI 05M <sup>1)</sup> 764 x 480 px	Focal ler [mm]	Minimum measurement distance*	Angle		0.1	0.2	0.3	0.5	1	2	4	6	10	30	100
OF16	16	0.2 m	39° 25° 46° 0.94 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]		0.14 0.09 0.17 0.2	0.21 0.14 0.25 0.3	0.36 0.23 0.42 0.5	0.72 0.45 0.85 0.9	1.43 0.90 1.69 1.9	2.87 1.80 3.38 3.8	4.30 2.70 5.08 5.6	7.2 4.5 8.5 9.4	21.5 13.5 25.4 28.1	71.6 45.0 84.6 93.8
OF25	25	0.5 m	26° 16° 30° 0.60 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]	0.046 0.029 0.054 0.1	0.09 0.06 0.11 0.1	0.14 0.09 0.16 0.2	0.23 0.14 0.27 0.3	0.46 0.29 0.54 0.6	0.92 0.58 1.08 1.2	1.83 1.15 2.17 2.4	2.75 1.73 3.25 3.6	4.6 2.9 5.4 6.0	13.8 8.6 16.2 18.0	45.8 28.8 54.1 60.0
OF50	50	1.5 m	13° 8° 15° 0.30 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]				0.11 0.07 0.14 0.2	0.23 0.14 0.27 0.3	0.46 0.29 0.54 0.6	0.92 0.58 1.08 1.2	1.38 0.86 1.62 1.8	2.3 1.4 2.7 3.0	6.9 4.3 8.1 9.0	22.9 14.4 27.1 30.0
OF75	75	2.0 m	9° 5° 10° 0.20 mrad	HFOV [m] VFOV [m] DFOV [m] IFOV [mm]					0.15 0.10 0.18 0.2	0.31 0.19 0.36 0.4	0.61 0.38 0.72 0.8	0.92 0.58 1.08 1.2	1.5 1.0 1.8 2.0	4.6 2.9 5.4 6.0	15.3 9.6 18.0 20.0

<sup>&</sup>lt;sup>1)</sup>The optris PI 05M is only avaible with OF25 lens and the optris PI 08M is avaible with OF16 and OF25 lens.


<sup>\*</sup>Please note: Please use the optics calculator on our website in order to calculate measurement fields with shorter measurement distances: www.optris.global/optics-calculator

Microscope optics	£	ent		Distance to measurement object [m]							
<b>PI 640</b> 640 x 480 px	Focal length [mm] Minimum measurement		Angle		0.08	0.09	0.1				
MO44	44.2	0.08 m	12°	HFOV [m]	0.018	0.021	0.023				
Microscope optics			9°	VFOV [m]	0.014	0.016	0.017				
			15°	DFOV [m]	0.023	0.026	0.029				
			0.36 mrad	IFOV [mm]	0.028	0.032	0.036				

Microscope optics	£	ent			to measurement object [m]					
<b>Xi 400</b> 382 x 288 px	Focal length [mm]	Minimum measurement distance*	Angle		0.09	0.1	0.11			
F20 CF	20	0.09 m	18°	HFOV [m]	0.031	0.034	0.037			
Microscope optics			14°	VFOV [m]	0.024	0.026	0.028			
			23°	DFOV [m]	0.039	0.043	0.047			
			0.9 mrad	IFOV [mm]	0.08	0.09	0.10			

#### **APPLICATIONS**

#### Injection molding

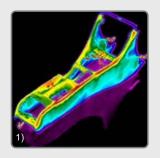

In order to prevent component distortion during injection molding, the process is monitored by thermal imaging cameras detecting and adjusting temperature overor undershoots during molded part measurement.

Recommended device: PI 450i


#### Infrared technology for fire protection



Early fire detection with infrared cameras is an important protective measure in industry to prevent irreparable damage to industrial plants and buildings.

Recommended device: Xi 400


#### **Component inspection of circuit boards**

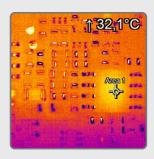

More and more manufacturers of electronic circuit boards rely on non-contact temperature measurement due to the constantly increasing performance of their components.

Recommended devices: PI 640 microscope optics, Xi 400 microscope optics

#### Workpiece control during drop forging

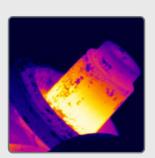

In drop forging, the semi-finished products must be at a certain forging temperature before forming. In order to achieve the optimum production result, the surface temperature of the material is controlled ccordingly.

Recommended devices: PI 1M, PI 05M

References: 1) GTT Willi Steinko 2) AdobeStock / zlikovec

Optris GmbH Ferdinand-Buisson-Str. 14 13127 Berlin · Germany Tel.: +49 30 500 197-0 Fax: +49 30 500 197-10

E-Mail: info@optris.global www.optris.global